


HYDRAULIC CONNECTION  
WITH/WITHOUT THE H ANGLE VALVE

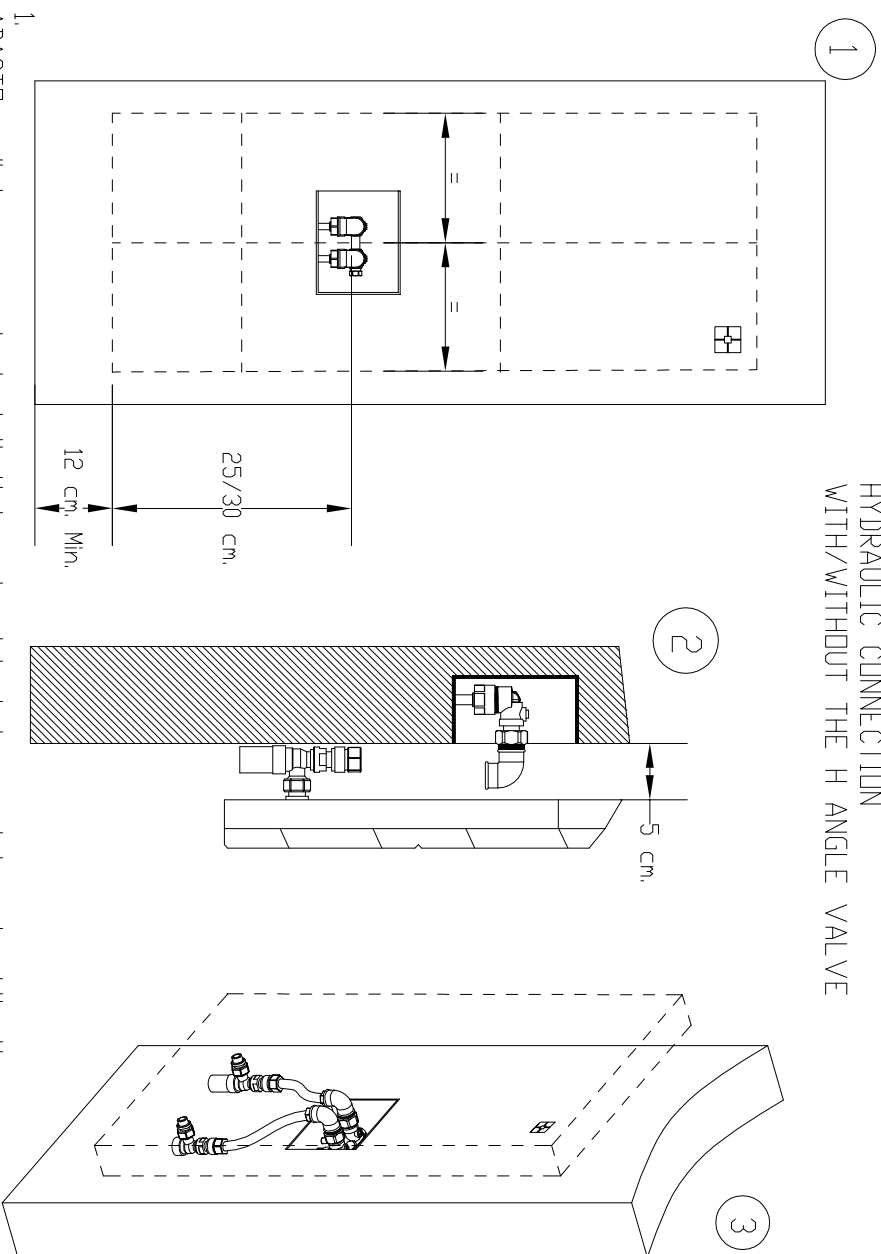

1. ADADCTD radiator, easy to install, it is not subject to any interaxis obligations. ADADCTD need to be positioned 12 cm minimum from the floor in order to enable the balancing movement system to work. The H angle valve is to be positioned vertically at 25/30 cm from the bottom of the radiator and horizontally at the centre of the radiator, with about 15cm tolerance.


2. The ½" F-F fitting elbows are to be positioned on the H angle Valve . The fitting elbows must not stick out more than 5 cm from the wall.

3. The valve and lockshield valve are already installed on the radiator. Connect valve and lockshield valve to the fitting elbows through the flexible hoses.

IN CASE OF INSTALLATION WITHOUT THE H ANGLE VALVE, SAME PROCEDURE IS TO BE USED, ADDING UP A BALL VALVE AFTER THE FITTING ELBOWS.

The ADADCTD connection system via flexible hoses enables the easy replacement of a traditional radiator. For further information please contact PROJECTCLIMA Technical Office.

H ANGLE VALVE

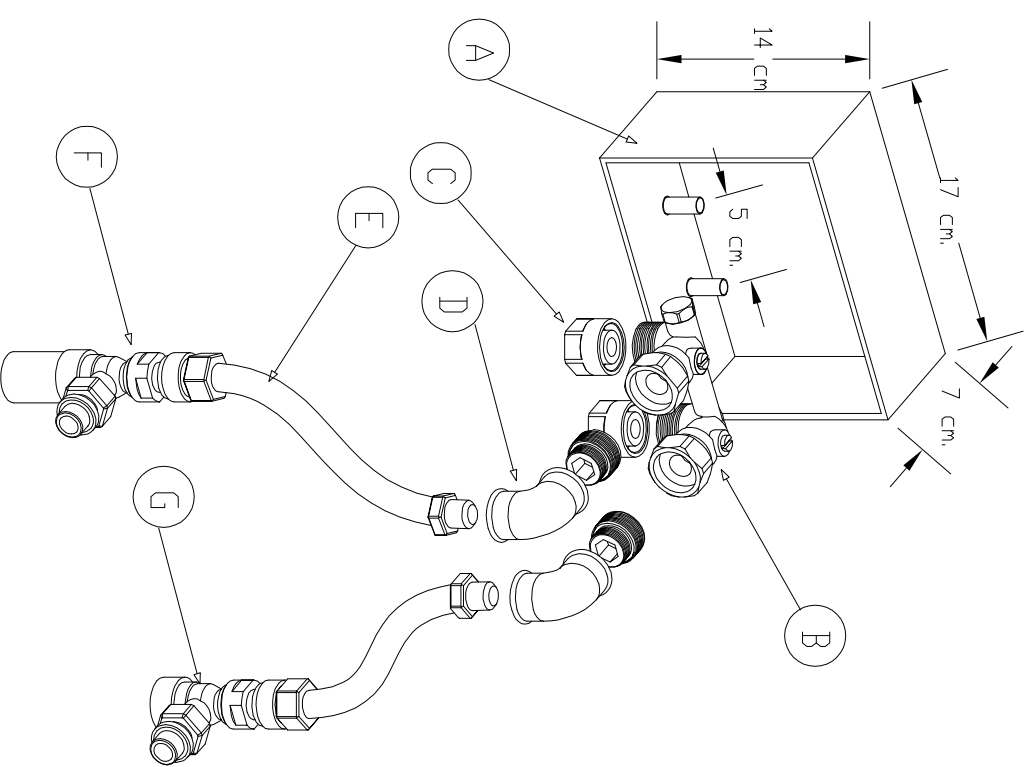

- A In-wall box
- B H Angle Valve
- C Copper / Multi-layer pipe adapter
- D ½" F-F Fitting Elbow
- E Stainless Steel and EPDM flexible hose
- F Valve
- G Lockshield valve